


Rotary Shaft Seal

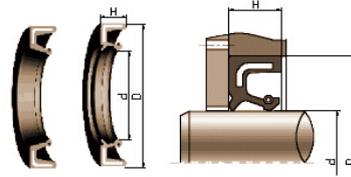

**Tolerancia del
diámetro exterior
del sello de aceite**

**Paquete
de
carcasa
de
plástico**

**Cáscara
de metal**

Seleccione	Consulta	Eje y apertura	Tolerancia de apertura del manguito del eje	Tolerancia del eje correspondiente
6.01□10.00	0.022	-0.09	+0.07/+0.18	+0.12/+0.27
10.01□18.00	0.027	-0.11	+0.07/+0.18	+0.12/+0.27
18.01□30.00	0.033	-0.13	+0.08/+0.20	+0.15/+0.30
30.01□50.00	0.039	-0.16	+0.08/+0.20	+0.15/+0.30
50.01□80.00	0.046	-0.19	+0.09/+0.23	+0.17/+0.32
80.01□120.0 0	0.054	-0.22	+0.10/+0.25	+0.20/+0.35
120.01□180. 00	0.063	-0.25	+0.11/+0.28	+0.22/+0.40
180.01□250. 00	0.072	-0.29	+0.13/+0.31	+0.25/+0.45
250.01□315. 00	0.081	-0.32	+0.15/+0.35	+0.28/+0.50
315.01□400. 00	0.089	-0.36	+0.18/+0.40	+0.30/+0.55
400.01□500. 00	0.097	-0.4	+0.20/+0.45	+0.33/+0.60